

On-site instructions for precast Stairs.

Access

It is the contractor's responsibility to provide suitable access to the site for the delivery vehicle and to provide an appropriate stacking area for the stairs and/or landings. It is the contractor's responsibility to offload the vehicle with the appropriate machinery and lifting gear.

The delivery driver will satisfy himself that the offload will be safe and that he can drive to the appropriate area. The driver will not remove straps until the vehicle is stationary in the designated stacking area.

Storage

The ground should be level and firm, preferably compacted hardcore or concrete. The stairs should be supported with timber bearers at each end and landings can be stacked with timbers above the one below.

Any discrepancies or damages should be reported immediately to our office on 023 8086 7000.

Delivery

We have allowed a period of 1 hour to offload from arrival, £80 per 1 hour thereafter will be charged if delayed by site.

On-site handling

The stairs and/or landings should be installed with the appropriate machinery and lowered gently into position, avoiding any sudden impact which may cause damage.

Moving the stairs and/or landings on-site should be done one at a time with the appropriate lifting equipment. We advise moving and installation is done with a mobile crane or tower crane and suitable chains and lifting clutches must be used.



Timber Battens Each End of
Stair Flight

Timber Battens Positioned
Directly Above Battens in
Row Below

